




1853117
Soho Console


Parts and Hardware List

A.	Top Assembly	1 pc
B.	Front Legs	2 pcs
C.	Back Legs	2 pcs
D.	Bottom Shelf Assembly	1 pc
E.	Adjustable Shelf	1 pc
F.	Shelf Support Pins	4 pcs
G.	Flat Washer	8 pcs
H.	Lock Washer	8 pcs
I.	Allen Head Bolt	8 pcs
J.	Allen Head Wrench	1 pc


- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

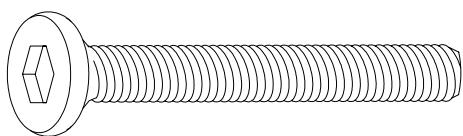


I. Allen Head Bolt



G. Flat Washer

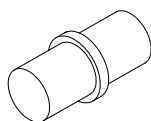

F. Shelf Support Pin



H. Lock Washer



1853117
Soho Console

Attach Legs and Bottom Shelf Assembly

Parts required

A. Top Assembly	1 pc	G. Flat Washer	8 pcs
B. Front Legs	2 pcs	H. Lock Washer	8 pcs
C. Back Legs	2 pcs	I. Allen Head Bolt	8 pcs
D. Bottom Shelf Assembly	1 pc	J. Allen Head Wrench	1 pc

1. **Attach Front (B) and Back Legs (C)** Align the pre-threaded holes at the top of one of the Front Legs (B) and one of the Back Legs (C) with the pre-drilled holes on the corner blocks. Secure with the Allen Head Bolts (I), Lock Washers (H) and Flat Washers (G) using the Allen Head Wrench (J). Do not fully tighten at this point.
2. **Attach Bottom Shelf Assembly (D)** Insert the corners of the Bottom Shelf Assembly (D) into the grooves on the attached Front Leg (B) and Back Leg (C). Secure Shelf in place with the Allen Head Bolts (I), Lock Washers (H) and Flat Washers (G) using the Allen Head Wrench (J). Repeat steps 1 and 2 to attach the other two legs to Top Assembly (A) and Bottom Shelf Assembly (D). Tighten all bolts.

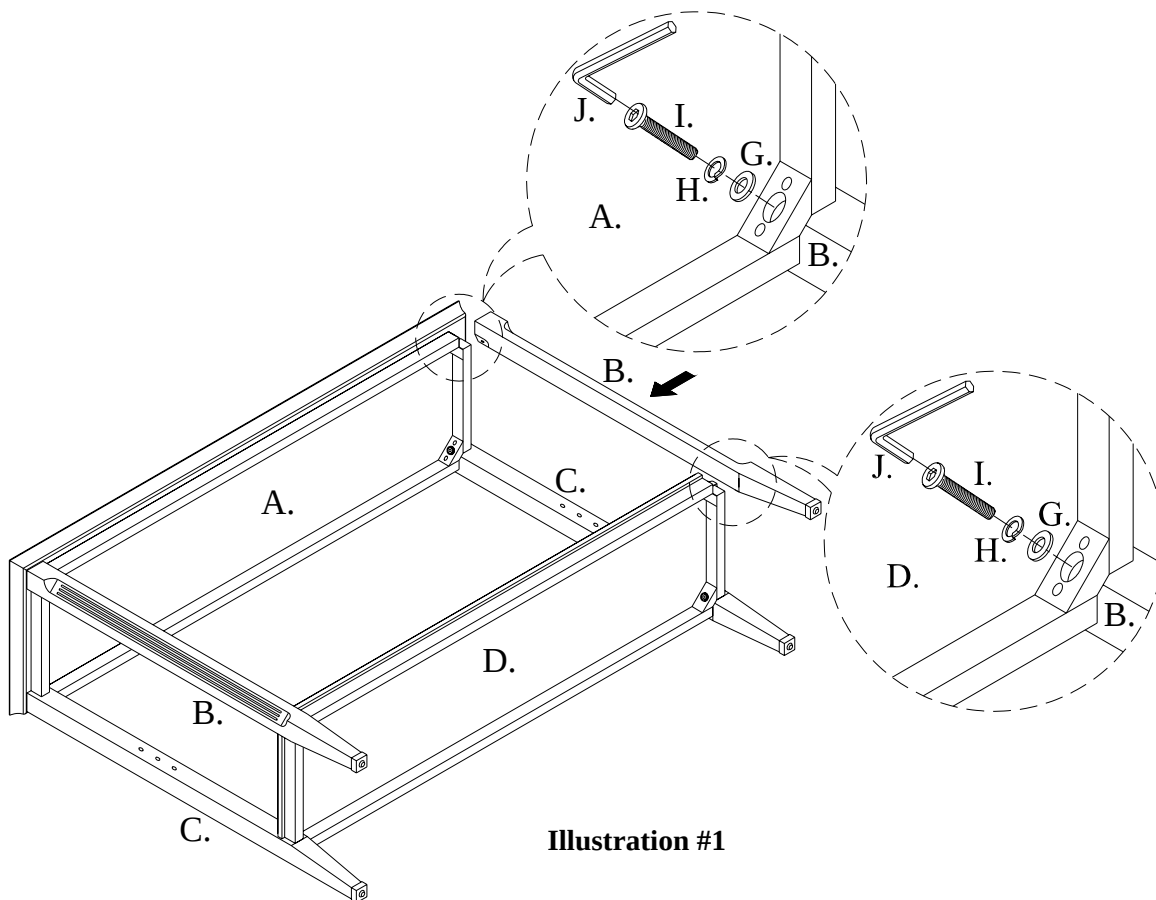


Illustration #1



1853117
Soho Console

Attach Adjustable Shelf

Parts required

E.	Adjustable Shelf	1 pc	F.	Shelf Support Pin	4 pcs
----	------------------	------	----	-------------------	-------

3. **Attach Adjustable Shelf (E)** Turn the unit upright. Insert the Shelf Support Pins (F) into the pre-drilled holes on the legs at the desired height. Place the Adjustable Shelf (E) over the pins.

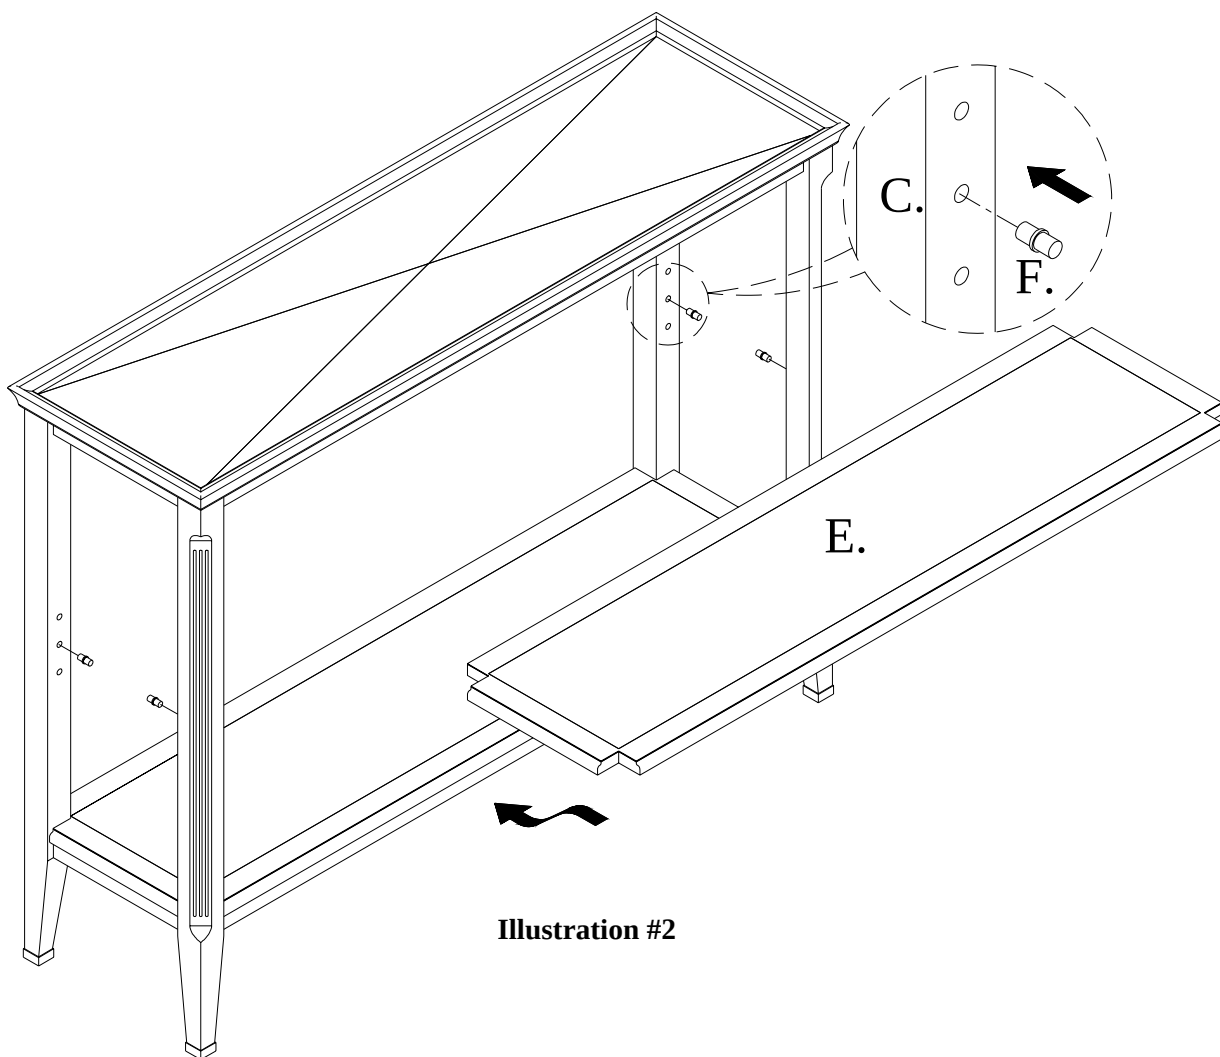


Illustration #2